


MARLOW GATE STRATFORD PEDESTRIAN GATE


Please check that you have all the required components on site to complete the installation

H-Frame to match gate	X 1	✓
Gate	X 1	✓

MARLOW GATE

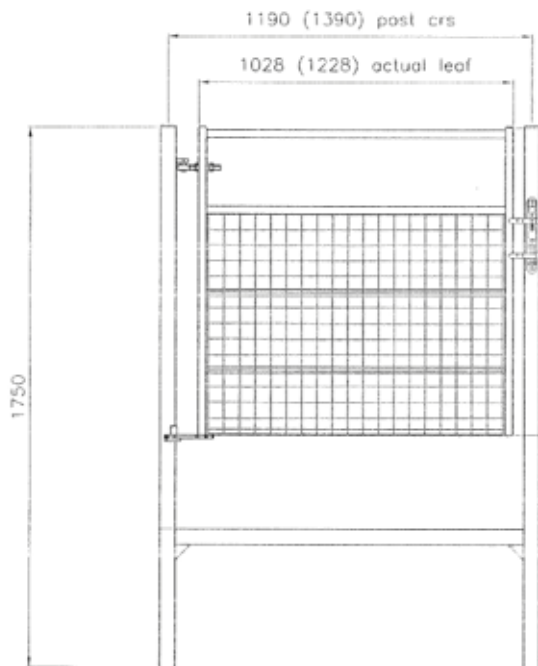

STRATFORD GATE

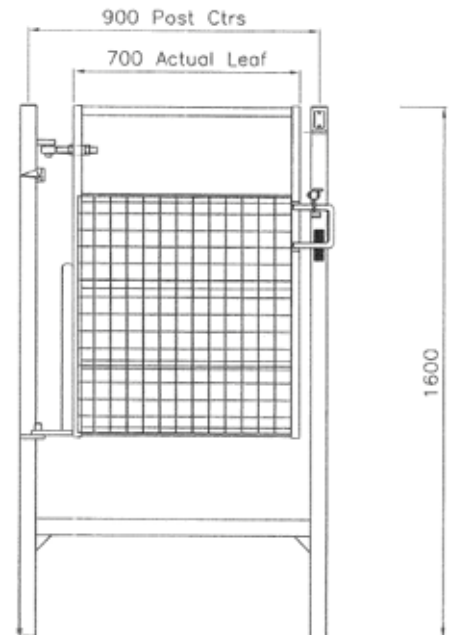

These gates are normally transported as one complete unit. For ease of handling and installation it is possible to detach the gate from its frame.



If you need any further advice/guidance regarding the installations of any of these products please contact the office on the number below.

Installation Instructions

1 INSTALLING THE GATE

- 2 Holes and a shallow trench are required. The trench should be deep enough for the bottom of the gate to be approximately 75mm above ground level. The cross bar must be level if the ground is uneven. It is possible to increase the height of the gate to match the adjoining fence but remember that if the cross bar is too close to ground level it may become a problem in wet weather on a busy path.
- Check level and vertical alignment of the frame before filling the holes and trench with rubble and/or concrete.
- Position the gate squarely between the frame upright by adjusting the gate eye.

2 COMPLETION

- Check the alignment of the gate and adjust the gate eye if necessary.
- Check that all nuts are tight.
- Remove any rough patches of zinc with a file or sandpaper.